
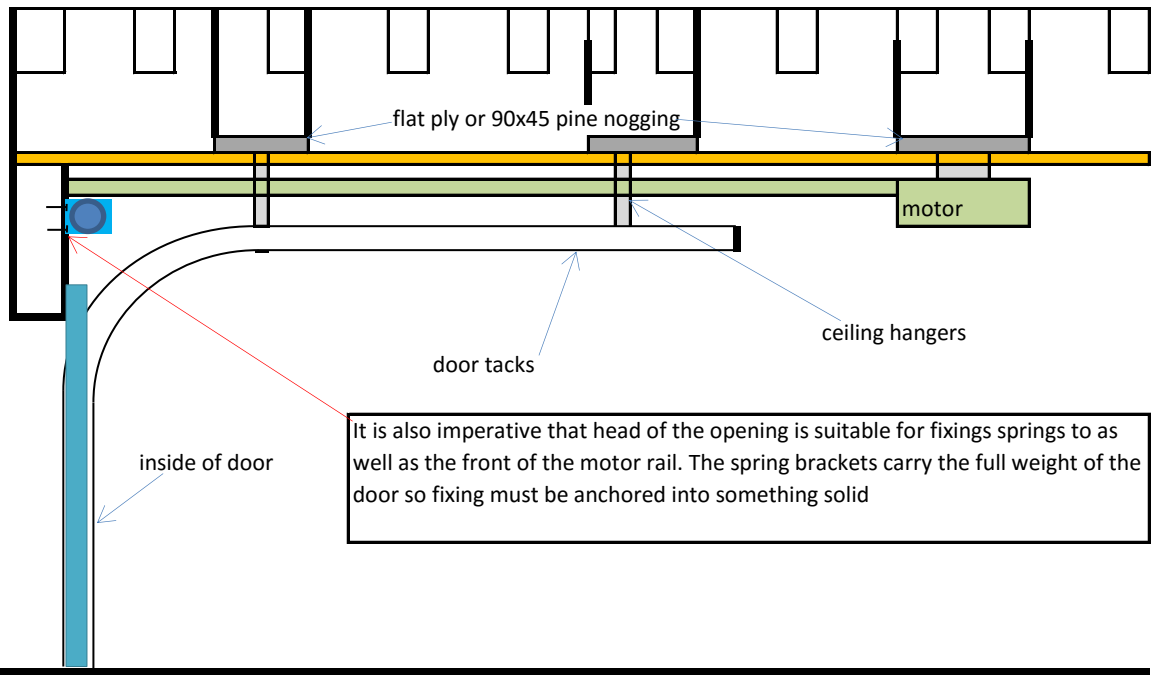


To safely install a sectional garage door regardless if double or single it is imperative that roof fixings blocks are fitted prior to ceiling being installed especially when suspended ceiling is used. Fixing direct to furring channels is not recommended and would not comply with building regulation hence garage door companies will not warrant the installation unless fixing blocks are correctly installed.

These blocks are ideally timber large enough to span between the fixings like treated pine say 90x45 or similar which can take at least 45-50mm coach screw

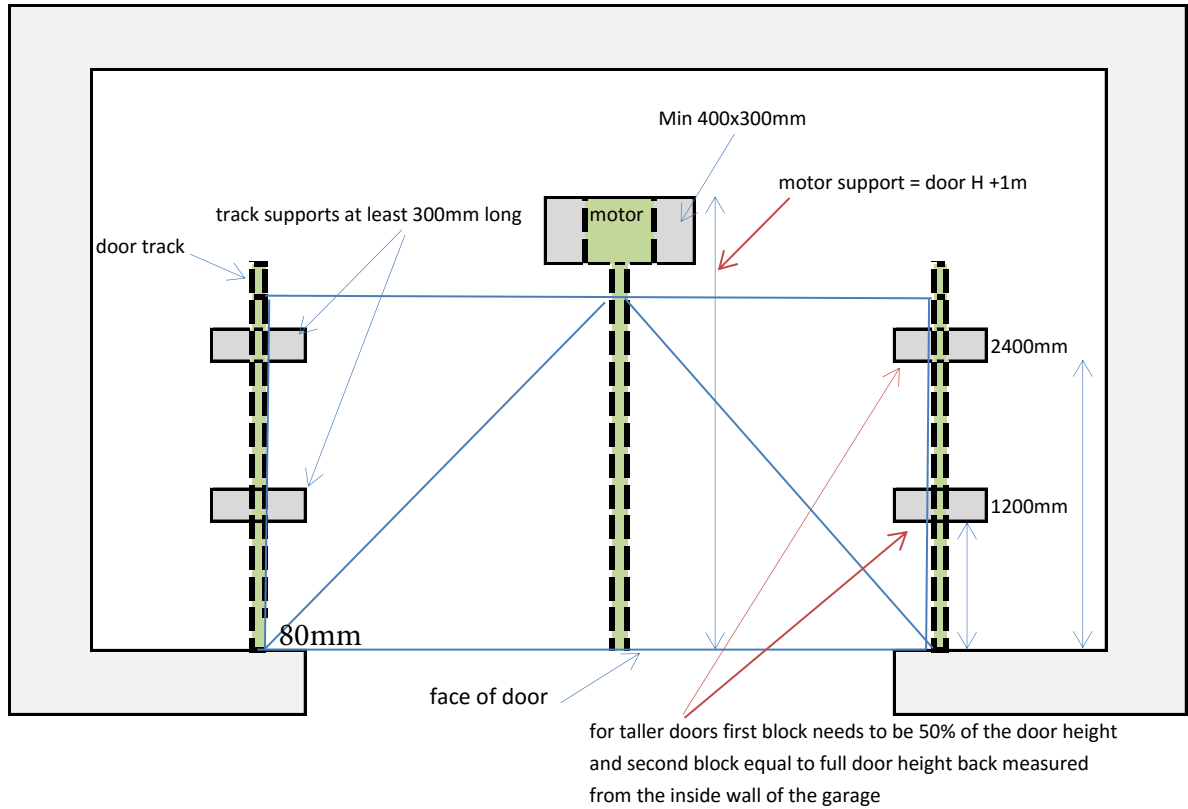

Blocks need to be securely fixed to the main roof structure and not just glued to the ceiling sheets